

PROGRAMMING THE DEVICE

Press SET button for 2 seconds



Adjust SET 1 value by using \triangle ∇ buttons.



Press SET button



End of program

Calibration Adjustment

Press SET and \triangle buttons together for 2 seconds.




Adjust CALL value by using \triangle ∇ buttons.




Press SET button



End of program

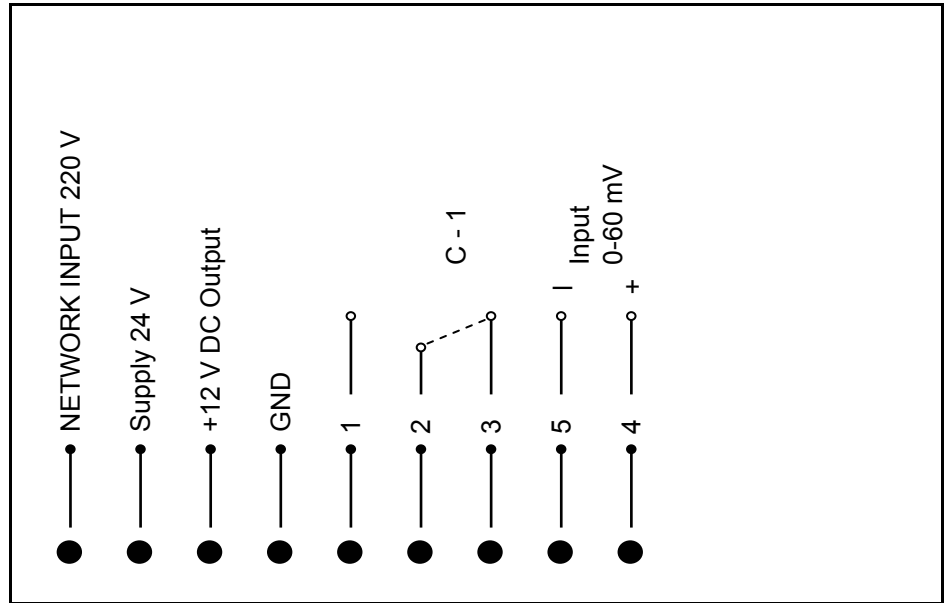

92 mm

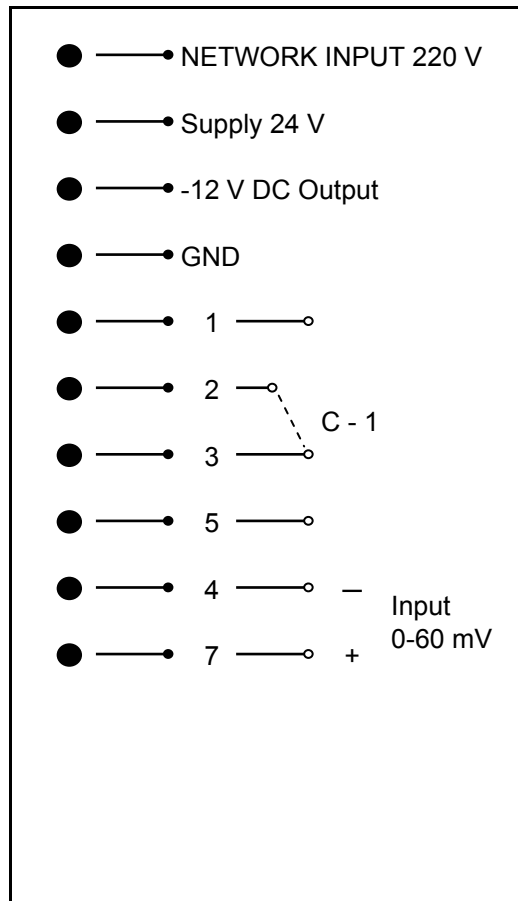

92 mm

41 mm

BACKSIDE TERMINAL BLOCK CONNECTIONS